

Installing Your Custom Decals


What you need for decal installation:

- Your decal or window cling
- A Spray Bottle
- A few drops of dish soap in a pint of water
- A rubber-tipped squeegee

Installation:

Step 1. Clean the Surface

Decals adhere best to clean surfaces. Before you start the installation process, clean the window thoroughly and let it dry.

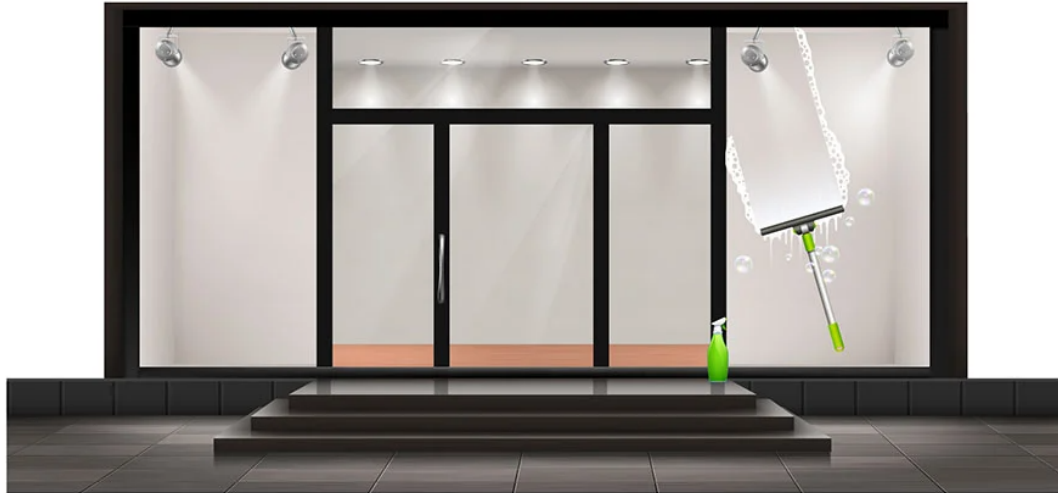

Step 2. Identify the Sticky Side

Please be sure to let us know if you are planning on installing your decal inside or outside, so we can ensure you have ordered the correct product for your needs and the space it will be installed.

For decals being installed on the outside of a window or on a wall, the protective sheet (the smoothest, shiniest side of your graphic) will be on the back of the image. Decals installed on the inside of a window, the protective sheet will be on the front of the graphic.

Step 3. Removing the Protective Sheet & Spray the Decal with Slightly Soapy Water (if needed)

For smaller decals, simply peel off the backing and lightly press the decals onto the window.



For larger decals, spray the adhesive side with soapy water, position them on the window, and then use a rubber-tipped squeegee to remove any air pockets or excess water. The adhesive will activate once it is dry.

Helpful Tips:

- Measure the area where the graphic is being installed, find the center, & mark with a piece of painter's tape. Do the same on your graphic.
- Tape the graphic in place, matching the center lines.
- Peel away and trim off one side of the protective sheet. Use the squeegee to smooth the graphic out, starting from the center. Once adhered, repeat this process for the other side.